



**OXDALE PRODUCTS LTD**



**MAINTENANCE AND USER GUIDE**


**PADDOCK/LAND ROLLER**



## CONTENTS

<b>Safety</b>	<b>3</b>
<b>Before Use</b>	<b>4</b>
<b>Using the Roller</b>	<b>6</b>
<b>Storage</b>	<b>7</b>
<b>Warranty</b>	<b>8</b>
<b>Contact Details</b>	<b>9</b>

Where to find us 

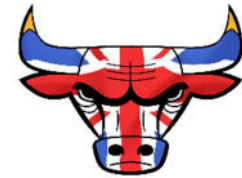

Facebook	@OxdaleProducts
Instagram	@oxdaleproducts
Twitter	@oxdaleproducts
TikTok	@oxdaleproducts
Email	sales@oxdaleproducts.co.uk
Telephone	01246 529020
Location	Unit 20-21, Foxwood Road, Chesterfield, S41 9RF

## RELATED PRODUCTS

### Weeder Tines

Available in 4, 6 and 8 foot wide.

8mm tines are strong and long lasting.

Removes moss, dead grass, and other weeds.

Can be fitted to tractors with CAT 1 / 2 Linkages.



### Del Morino Flipper Heavy Duty Hammer Head Flail Mower

Tractor mounted, PTO driven, 15 – 70HP, RPM 540/1000/2000, universal PTO shaft Category 4.



Reversible three-point hitch.

Two belt transmission.

Adjustable rear roller.

Adjustable skids.

Mounting points for side shift.

### Chain Harrows

Mounted and trailed chain harrows in 4, 6 and 8 feet.



Trailed harrows can be used with ATV or 4 x 4.

Mounted harrows have 12mm tine thickness, trailed harrows have 13mm thickness.

## SAFETY

**PLEASE READ THESE INSTRUCTIONS BEFORE USING YOUR OXDALE PRODUCTS PADDOCK ROLLER.**

Adherence to the proper maintenance and usage procedures outlined in this guide will ensure the optimum life span and effectiveness of your roller.

Only persons who are competent to do so, having read this manual in full, should use the roller.

## BEFORE USE

Before each use of the roller, carry out a visual inspection, taking note of the following:


- Any damage or leakages and ensuring that these are fully repaired before use.
- Damaged, worn, and missing parts and replace as needed.
- Ensure that nuts and bolts are secure and tighten if required.

Grease the roller bearings at each end before use or for every ten hours of operation. Ensure that the grub screws in the bearing collar are securely tightened (these are located behind the section of the roller frame as pictured.)



## CONTACT DETAILS

**Oxdale Products Ltd**  
**Units 20 – 21 Foxwood Road**  
**Off Sheepbridge Lane**  
**Chesterfield**  
**S41 9RF**

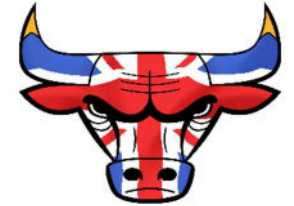

**Web:** [www.oxdaleproducts.co.uk](http://www.oxdaleproducts.co.uk)

### **Registered Address:**

Oxcroft Stables  
30 Oxcroft Estate  
Stanfree  
Derbyshire  
S44 6AU  
Company Number: 6490139 England & Wales

## **WARRANTY**

Warranty claims which arise because of incorrect operation, insufficient maintenance, or the use of non-approved consumables, e.g., lubricants, hydraulic oils will not be accepted by the manufacturer.

Only original Oxdale parts may be used. When ordering replacement parts, please provide the model's name and the year you bought it.

Pressure adjustments to the valves must only be carried out by Oxdale authorised dealers.

No liability is accepted for damages caused by incorrect repairs, the non-use of original Oxdale replacement parts or repairs that have not been carried out by Oxdale or a pre-authorised specialist, the same applies to auxiliary parts and accessories.

All warranty claims are on a return to manufacturer basis.

All Oxdale products have a full 12 month warranty.

Each separate bearing features one grease nipple and two grub screws.



To grease the roller, attach the grease gun nozzle (not supplied with the product) to the grease nipple and squeeze to pump grease into the bearing.

## USING THE ROLLER

Ensure that the roller is securely hitched to your tractor or towing vehicle before pulling away. Do not tow the roller at speeds faster than 30mph.

### **THE ROLLER IS NOT ROAD TOWABLE**

For optimum rolling weight, remove the ballast plug (this can be seen in the centre of the image below.)



Once you have removed the plus, fill with water, and replace the plug securely.

## STORAGE

Ensure that you empty the roller of water before storing for winter. Frozen water inside the roller drum can cause damage.

We recommend that you store your roller in a dry place when it is not in use.

The roller should be stored and transported horizontally.

During transport, the roller should be securely strapped down.